

# OLYMPIA ®

Convenient mobile phone with large keys  
Viva Colour model



## Operating instructions

17.12.2012 en/en

Olympia Business Systems Vertriebs GmbH

Zum Kraftwerk 1

45527 Hattingen

# Contents

---

Setting Up .....	3
Operating Elements .....	6
Getting Started .....	7
Phone Book .....	10
Making and Taking Calls .....	11
Text Messages (SMS) .....	13
Call Lists .....	15
Phone Settings .....	17
Network Settings .....	17
Security Settings .....	18
Restoring the Default Factory Settings .....	19
SOS (Emergency Call) Function .....	19
User Profiles .....	19
Organizer .....	20
Multimedia .....	22
Selecting Pictures .....	22
Torch .....	22
Troubleshooting .....	23
Technical Properties .....	24
Safety Information .....	25
Maintenance / Guarantee .....	27
Declaration of Conformity .....	28
Index .....	29

## Setting Up

**⚠ Caution:** Before you start, please read the safety information on Page 25!

### Scope of delivery

The box contains:

- |                          |                        |
|--------------------------|------------------------|
| 1 phone                  | 1 USB connection cable |
| 1 li-ion battery         | 1 charging cradle      |
| 1 USB charging adapter   | 1 headset              |
| 1 quick reference manual |                        |


### Installing the SIM card

**⚠ Caution:** Risk of swallowing small objects!  
The SIM card can be removed.  
Small children can swallow them.

1. Switch the phone off.


**⚠ Caution:** Pay attention that the SIM card is not bent or scratched. Prevent any contact with water, dirt or electrical charges.

2. Slide the battery compartment cover downwards and remove it. If there is already a battery inside, remove it.

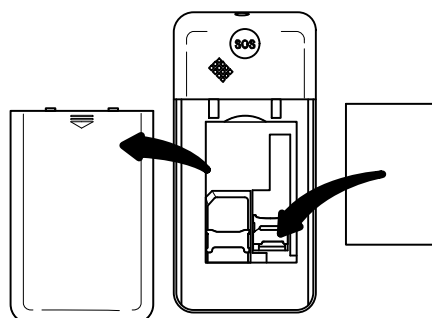

**📌 Note:** Your telephone number is carried by the SIM card, not the phone. Therefore if you use a SIM card you had in a previous phone, you will keep the same phone number.

3. Slide the SIM card with the golden contacts facing down in the SIM card slot provided. The SIM card must be located under the metal retaining bar to be in the correct position.

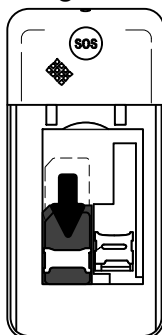


4. Insert the battery. The golden contacts on the battery must face towards the top left.

5. Replace the battery compartment cover.

### Inserting the microSD memory card

The phone memory can be extended by installing the microSD memory card option. This increases the quantity of data which can be stored.

1. Open the silver metal clip beside the SIM card slot by sliding it gently downwards until it unlocks with a soft click. Pivot the metal bar up.
2. Lay the microSD memory card with the contacts facing down in the open compartment. The shape of the compartment corresponds exactly to the shape of the microSD memory card, meaning that it cannot be inserted incorrectly.
3. Pivot the metal bar down and prize it gently to the upward, using a little force, until the metal bar snaps lightly into place.

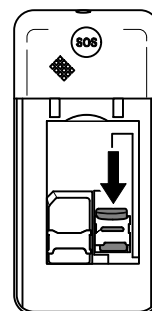

### Charging the battery


**! Attention:** For safety reasons, only use the charging adapter plug and cable supplied. Other charging adapters could damage the phone.

**! WARNING:** Before starting to charge the battery, check that it has been installed properly. Do not remove the battery while it is being charged. This could damage the phone.


**! WARNING:** Only charge the battery when at room temperature. Do not expose the battery to heat, direct sunlight or temperatures below 0 °C / above 45 °C.

**Note:** When charging the battery for the first time, it should be charged for at least 4 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles. If the battery is fully discharged, it may take some time for the charging process to be indicated.

Connect the charging adapter plug and cable as illustrated in the diagram. For safety reasons, only use the charging adapter plug and cable supplied.

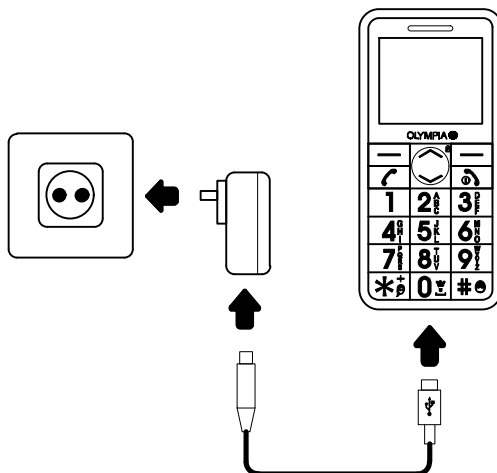

Alternatively, you can use the charging cradle supplied.

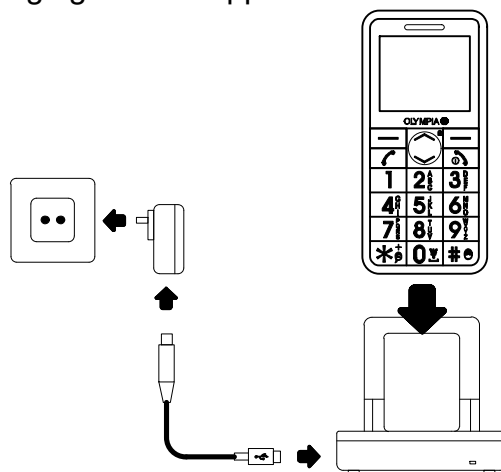

## Switching the phone on and off

3 sec.  Switch the phone on.

3 sec.  Switch the phone off.

**Note:** Some SIM cards will require you to enter a PIN code. Follow the instructions which appear.

## Battery charge status indicator

The current battery charge status is indicated in the display as follows:



 
Full



Half empty



Low



Empty

When the battery charge is low, a corresponding warning message appears in the display.

**Note:** Charge the battery.


In cases where the battery charge is extremely low, it is possible that the back-lighting no longer works and certain functions are no longer available.

When the battery charge drops below the minimum status, the phone switches off automatically.

## Checking a network is available

Some networks offer better coverage than others in different areas. The icon on the left-hand side of the display indicates the availability and strength of a network. The higher the number of bars in the display icon, the better the reception quality. The name of the network appears at the centre of the display.



 
 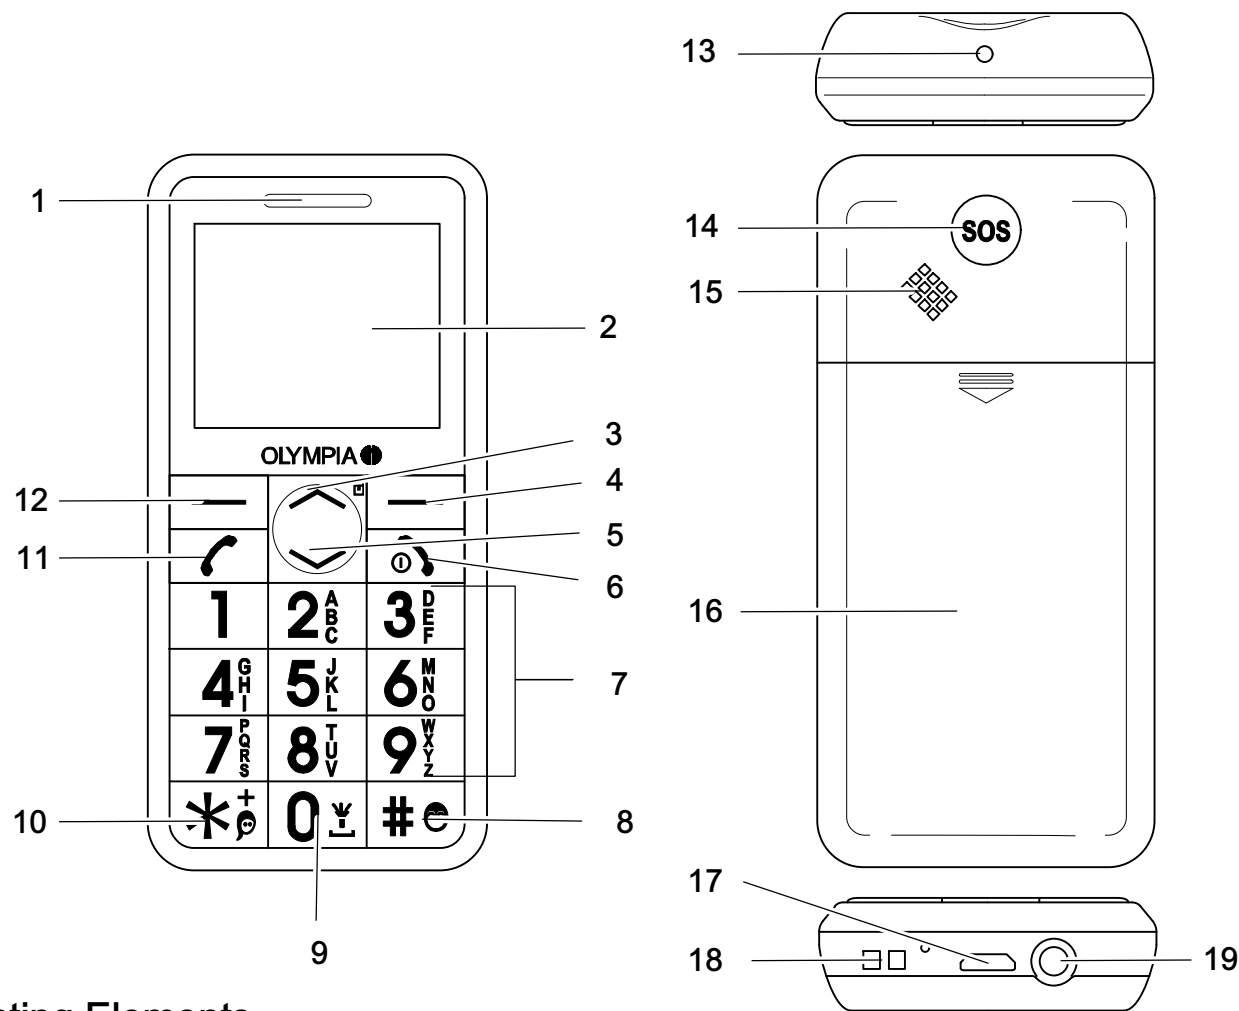










Operating Elements

1	Earpiece
2	Display
3	Navigate up / Key lock on/off
4	Select picture / Back / Cancel
5	Navigate down
6	End a call / Switch phone on/off
7	Digit keys 0-9
8	Hash key / Speed dial number of male contact / Navigate right
9	Switch torch on/off
10	Star key / Speed dial number of female contact / Navigate left
11	Answer incoming call
12	Open menu / Confirm
13	Torch LED
14	SOS (emergency call) key
15	Loudspeaker
16	Battery compartment cover
17	Micro USB port
18	Charging contacts
19	Headset port

 
 
 
 

 

## Function keys

Key	Mode	Press	Press & Hold
	Standby	Switch key lock on/off	
	Standby	Open main menu	
	Menu	Select submenu	
	During call	Adjust call volume	
	Standby	Display call list	
 (left)	Menu	Confirm selection	
	Standby		Switch phone on/off
 (right)	Menu	Move back / Cancel	
 (right)	Standby	Open picture selection	
	During call	End call (on-hook)	


## Getting Started

This chapter provides basic information on using the operating instruction manual and the phone.

## Description of operating sequences in the manual

	Press the key depicted briefly
2 sec. 	Press the key depicted for 2 seconds
Hold 	Press and hold down the key depicted
	Enter numbers or letters
	Mobile phone rings
	Represents text in the display
	Indicates icons in the display

## Standby mode

All descriptions in this operating manual assume that the phone is in Standby mode. The system switches to Standby mode by pressing the  key, several times if necessary. It may be necessary to deactivate the key lock function.

## Energy-save mode

The phone switches to energy-save mode if no keys have been pressed for a certain time. The display no longer lights up. Press any key to deactivate Energy-save mode.

# Getting Started

---

## Softkeys

Different functions are assigned to the softkeys  according to the various menus.

## Key lock

The key lock function is intended to prevent other functions being activated inadvertently.


 
 


 


 
 

Activate Standby mode and press:

2 sec.  Key lock on/off

 **Note:** Calls can still be taken in the normal way even when the key lock function is activated.

 

 

 
 

 
 
 

 

 
 

 

## Navigating in the menu

All the functions can be accessed via the various menus.

 (left)	Open the main menu
	Select the required submenu
 (left)	Open the submenu
	Select the required function
 (left)	Open the function
  (left)	Select the required setting and confirm
	Use the keypad to enter numbers or letters
 (left)	Confirm the entries
 (right)	Move one level back
	Cancel the programming and saving processes and return to Standby mode

## Creating phone book entries - example

The way in which to navigate through the menus and define settings is explained by means of the example **Creating phone book entries**. Proceed as in this example for all the settings.

 (left)	Open the main menu
   (left)	Select the option
 	
 (left)	Select the option
  / 	
 (left)	Select the memory location
 	Enter the name
  (left)	Enter the phone number
   (left)	Entry is created



## Entering text and numbers

The keys on the keypad are also labelled with letters for the entry of text.

The phone provides various methods by which text can be entered. These are used when creating or editing entries in the phone book, when searching for names in the phone book and when writing text messages.

 **Note:** Not every method is always available for each application.

### Methods of entering text

Change the text input method to enter other characters.

Multi-tap, capital letters

---

Multi-tap, small letters

---

Digits 123



 
 

 **Note:** In order to toggle between the different input methods, press  while entering text.

### Multi-tap





 
In order to enter text in multi-tap mode, press the key labelled with the corresponding letter/character. If the first character of the group is required, press the key once. If the second character is required, press it twice, and so on.

To enter two characters assigned to the same key, press the key the respective number of times to enter the first character. Wait until the cursor skips to the next position and then enter the letter.

### Punctuation and special characters

When in Editing mode, press the  key. Punctuation marks and special characters are displayed. Press / to select the required character and press  (left) to accept it. You can recall a sequence of frequently used special characters in Edit mode by pressing the  key repeatedly.


 
### Other entries and functions

	Enter a space.
 (right)	Delete characters.
 (right) hold	Delete all characters.
 / 	Move the cursor.


 
 

## Phone Book

The phone book in the phone can store up to 300 entries.

 
 

 
 

 
 
 
 
You can store other entries on the SIM card.

- Always enter phone numbers with the country and area codes.
- When the memory capacity is used up, the corresponding message appears if an attempt is made to store another contact. Before new entries can be stored, old contacts must be deleted.
- The phone book entries are arranged alphabetically. To skip directly to a required phone book contact, press the corresponding first letter. Use the / keys to search for entries manually.

In order to open the phone book options, press the following keys:



 




 (left) / Phonebook  (left)




Press / to select an entry and press  (left) to open one of the following options:

 
 

 
 
 
 
 
	Dial the number selected.
	Compose text and send it to the contact (  Writing a text message, Page 13).
	View details of the entry selected.
	Edit the contact.
	Delete the contact.
	Copy the contact on the SIM card or phone.
	Move the contact on the SIM card or phone.
	Manage caller groups.
	Manage phone book settings.

## Phone book settings

To open the phone book settings, press:


 (left) / Phonebook  (left) / Phonebook settings  (left)

Press the / keys to navigate and press the  key to select from the following menu options:

 
	Select a location in which to store new contacts and from which the list of contacts are displayed.
	 Speed dialling; Page 11
	Enter your own phone number.
	Displays the memory status of the internal memory and SIM card.
	Copy all entries from the SIM card to the phone or vice versa.
	Move all entries from the SIM card to the phone or vice versa.
	Delete all phone book entries.

## Speed dialling

You can use the speed dialling function to assign up to 8 phone numbers to the **[2<sup>A</sup>]**-**[9<sup>B</sup>]** keys.

 **Note:** You can only assign phone numbers which are already stored in the phone book to speed dialling keys. Also check that the speed dialling function is enabled.

Navigate in the **[Speed dial]** option using the **[^]/[v]** keys and press **[←]**(left) to select any of the following menu options:

<b>[Status]</b>	Activate ( <b>[On]</b> ) or deactivate ( <b>[Off]</b> ) the speed dial function.
<b>[Set numbers]</b>	Use this option to assign any of keys ( <b>[2<sup>A</sup>]</b> - <b>[9<sup>B</sup>]</b> ) a speed dialling number for a phone book entry (  Assigning speed dialling numbers, Page 11).

## Assigning speed dialling numbers


To assign phone numbers to a speed dialling key, open the **[Set numbers]** menu and press the following:

<b>[^]/[v]</b> [digit key] <b>[←]</b> (left)	Select a digit key, to which a speed dial number should be assigned, from the list.
<b>[^]/[v]</b> [Entry] <b>[←]</b> (left)	Select the phone book entry and confirm it.

When Standby mode is active, press the key to which the phone number is assigned for 3 seconds and the number is dialled.

## Making and Taking Calls

### Taking a call

 Take the call.



### Rejecting a call

 Reject the call.

### Ending a call


 End the current call.

### Making a call

	Enter the phone number.
<b>[→]</b> (right)	Deletes the last digit if incorrect.
	Dial the phone number.

### Dialling numbers from the call list

Your mobile phone stores the last numbers dialled, calls received and calls missed in the corresponding call list.


 




 
	Open the call list.
<b>[^]/[v]</b> <b>[←]</b> (left)	Select the call list.
<b>[^]/[v]</b> <b>[...]</b> <b>[←]</b> (left)	Select the entry, display the options.
<b>[^]/[v]</b> <b>[Call]</b> <b>[←]</b> (left)	Select the menu option and dial the number.


# Making and Taking Calls

---


## Dialling numbers from the phone book

Check that phone numbers are stored in the phone book.

 (left)	Open the main menu
 /  Phonebook  (left)	Open the phone book.
 /  ... 	Select an entry and dial the number.

 **Note:** To skip directly to an entry, use the digit keys to enter the first letters of the name stored. If necessary, you must press a key several times in order to enter the respective letters.


## Speed dialling

The phone numbers must have been assigned to the speed dialling keys ( Assigning speed dialling numbers, Page 11).

Activate Standby mode and press:

3 sec.  -  Press and hold the key in Standby mode.

## Calling a female / male contact

The phone number must have been stored as a female / male contact ( Female / Male contact, Page 19).

3 sec.  or  Press and hold the key in Standby mode.

## Talk time display

The duration of a call is displayed in hours, minutes and seconds during the call.

## Setting the receiver volume

The volume can be adjusted during a call:

 /  Select the required volume.



Exposure to the receiver earpiece at full volume for a long period could cause ear damage.

## Text Messages (SMS)

Your phone can be used to transmit and receive text messages. This menu is used to write and manage your text messages.

**Note:** It is possible that not all functions described are supported by every mobile service provider. Therefore, please contact your mobile service provider locally for details.

To access the text message menu, press the following:

[Left] [Up]/[Down] [Messaging] [Left]

Press the [Up]/[Down] keys to navigate and press [Left] to select from the following menu options:

Write message	Compose the text message and send it (→ Writing a text message, Page 13).
Inbox	→ Inbox, Page 13.
Drafts	Display draft text messages.
Outbox	Display text messages not yet sent.
Sent messages	→ Outbox, Page 14.
Delete messages	Delete text messages.
SMS settings	→ Text message settings, Page 14.

## Writing a text message

**Note:** A standard text message contains 160 characters. Extra costs may be incurred for texts in excess of 160 characters.

To write a text message, press the following keys:

[Left] [Up]/[Down] [Messaging] [Left] [Write message] [Left]

[M:] Write the text (→ Entering text and digits, Page 9).

[Left] Open the options.

Press the [Up]/[Down] keys to navigate and press [Left] to select from the following menu options:

Send to	Send the text message to: - a number you have entered ([Enter number]). - an entry in the phone book ([Add from Phonebook]).
Input method	Change the input method.
Insert template	Insert a template.
Advanced	Add phone numbers or names from the phone book.
Save to Drafts	Save the text message in the Drafts folder.

## Inbox

Texts messages received are stored in the [Inbox] folder.

Navigate in the [Inbox] to select a text message using [Up]/[Down] and press [Left] to select from the following menu options:

 

 
View	View text message.
Reply	Reply to the text message.
Call sender	Call the sender of the message.
Forward	Send the message received to another person.
Delete	Delete the text message.
Delete all	Delete all messages in the [Inbox].
Save to Phonebook	Save the phone number of the sender in the phone book.

# Text Messages (SMS)

---


## Sent messages

Text messages sent are stored in the **Sent messages** menu.







Navigate in the **Sent messages** menu to select a text message using / and press  (left) to select from the following menu options:




<b>View</b>	View text message.
<b>Forward</b>	Send the message received to another person.
<b>Delete</b>	Delete the text message.
<b>Delete all</b>	Delete all messages in the <b>Sent messages</b> folder.



## SMS setup

 **Note:** It is possible that not all functions described are supported by every mobile service provider. Therefore, please contact your mobile service provider locally for details.







To open the SMS Settings menu, press:

 
 (left) / **Messaging**  (left) **SMS settings**  (left) **Message settings**  (left)

Press the / keys to navigate and press  (left) to select from the following menu options:


<b>Profile settings</b>	 Profile settings, Page 14.
<b>Voice mail server</b>	Define the Voicemail server.
<b>Common settings</b>	 Common settings, Page 14.
<b>Memory status</b>	Display the memory status of the phone and SIM card inserted.
<b>Preferred storage</b>	Define whether text messages should be stored on the SIM card or phone.

## Profile settings

/ Profile 1 / Profile 2  (left) / Edit  (left)




Navigate in the profiles using / and define the settings you require:

Profile name	Enter the profile name.
SMSC address	Change the SMSC number.

 **Note:** Text messages are distributed by a service centre (SMSC). If you want to send and receive text messages, you must enter a service centre number in your mobile phone. Normally, a number is already preset. You are advised to keep the factory settings.

Validity	Define how long attempts should be made to deliver a text message.
Message type	Define whether the message should be sent as a <b>Text</b> , <b>Fax</b> , <b>Email</b> or <b>Page</b> .

## Common settings


 
 

 
 
 
Navigate in the **Common settings** option using the / keys and press  (left) to select any of the following menu options:

<b>Delivery report</b>	Request a report regarding the delivery of messages.
<b>Reply path</b>	Define whether a reply message should be transmitted via the same SMSC.
<b>Save sent message</b>	Save messages sent in the <b>Sent messages</b> folder.

 
 

 
 
## Call Lists

Your mobile phone stores the last numbers dialled, calls received and calls missed in a corresponding call lists.

**Note:** If one of the phone numbers received matches an entry in the phone book, the associated name appears.

 
 

 
 
 
 
 (left)    (left)    (left)

Press the  keys to navigate and press  (left) to select from the following menu options:


 
 

 
 

	List of calls missed.
	List of calls made.
	List of calls taken.
	Delete one or all list(s).
	List of text messages sent and received.

### Call list options



 

 
 


 

**Note:** The same options are available for all of the call lists.


 
	Open the call list.
   (left)	Select a list and open it.
   (left)	Select an entry and open the options.

 
 

 

 
The following options are available:

	View details of the entry selected.
	Dial the number selected.
	Compose text and send it to the contact (  Writing a text message, Page 13).
	Save the contact in the phone book.
	Edit the contact prior to making the call.
	Delete the contact.

### Call settings

 (left)    (left)    (left)    (left)

Navigate with the  keys and press  (left) to select from the following menu options:

	Activate/Deactivate the call waiting option. If enabled, an acoustic signal tells you that another call has been received while you are making a call.
	 Diverting calls, Page 16.
	 Barring calls, Page 16.
	Switches from line 1 to line 2. A helpful feature to hold a call on line 1 while answering another call on line 2, for example.

## Diverting calls

This menu is used to divert incoming calls to another number which you define.

Navigate in the **Call divert** option using the **⏮/⏭** keys and press **←**(left) to select any of the following menu options:

<b>Divert all voice calls</b>	Diverts all incoming phone calls.
<b>Divert if unreachable</b>	Divert calls if your phone is outside the range of your network or is switched off.
<b>Divert if no answer</b>	Divert calls if they are not taken on your phone.
<b>Divert if busy</b>	Divert calls when your line is busy.
<b>Divert all data calls</b>	Diverts all data calls.
<b>Cancel all divers</b>	Disables all active divert settings.

## How to divert calls

Navigate in the **Call divert** menu and select the type of call divert you want to activate, then press **←**(left) and use the **⏮/⏭** keys to select from the following menu options:

<b>Activate</b>	Enable divert setting.
<b>Deactivate</b>	Disable divert setting.
<b>Query status</b>	Check whether a divert setting is currently enabled.

## Barring calls

This menu can be used to bar certain incoming and outgoing calls.

Navigate in the **Call barring** option using the **⏮/⏭** keys and press **←**(left) to select any of the following menu options:

<b>Outgoing calls</b>	Activate call barring for outgoing calls.
<b>Incoming calls</b>	Activate call barring for incoming calls.
<b>Cancel all</b>	Deactivate any call barring options set.
<b>Change barring password</b>	Change the call barring password

## Advanced settings

**←**(left) **⏮/⏭** **Call logs** **←**(left) **⏮/⏭** **Call settings** **←**(left) **⏮/⏭** **Advance settings** **←**(left)

Navigate with the **⏮/⏭** keys and press **←**(left) to select from the following menu options:

<b>Auto redial</b>	Activate/Deactivate automatic redialling. If a number called is engaged or cannot be reached, redialling occurs automatically until the person called answers. An acoustic signal is sounded and the number is dialled.
<b>Call time reminder</b>	Set an acoustic signal which is sounded at regular intervals during a call.
<b>Answer mode</b>	Enable/Disable answering a call by pressing any key.



## Phone Settings

The **Phone settings** menu is used to modify the basic settings, such as time, language, etc.

To access the menu, press the following:

**[Left]** **[Up/Down]** **Settings** **[Left]** **[Up/Down]** **Phone settings** **[Left]**

Navigate using the **[Up/Down]** keys and press **[Left]** to select from the following menu options:

<b>Time and date</b>	☞ Setting the time and date, Page 17.
<b>Schedule power on/off</b>	Set the respective time at which the phone should be switched on and off automatically.
<b>Language</b>	Change the language.
<b>Pref. input method</b>	Set the input method with which to compose text (☞ Entering text and digits; Page 9).
<b>Display</b>	☞ Display settings, Page 17.
<b>Misc. settings</b>	Set the brightness and back-light time for the display.

## Time and date settings

Navigate in the **Time and date** option using the **[Up/Down]** keys and press **[Left]** to select from the following menu options:

<b>Set home city</b>	Set the capital city.
<b>Set time/date</b>	☞ Setting the time and date, Page 17.
<b>Set format</b>	Set the date and time format.

## Setting the time and date

<b>[Up/Down]</b> <b>Set time/date</b>	
<b>[Left]</b>	Select the menu option.
<b>[Icon]</b> <b>HH:MM</b> <b>[Down]</b>	Enter the time and continue.
<b>[Icon]</b> <b>DD MM YYYY</b> <b>[Down]</b>	Enter the date and continue.
<b>Daylight saving</b> <b>On/Off</b> <b>[Left]</b>	Set time change and confirm it.

## Display settings

Navigate in the **Display** menu using the **[Up/Down]** keys and press **[Left]** to select any of the following menu options:

<b>Wallpaper</b>	Set the background image.
<b>Power on display</b>	Set the animation when the phone is switched on.
<b>Power off display</b>	Set the animation when the phone is switched off.
<b>Show date and time</b>	Activate/Deactivate date and time in the display.

## Network Settings

Open the **Network settings** menu and press **[Left]** to select the **Network settings** menu option. Navigate with the **[Up/Down]** keys and press **[Left]** to select from the following options:


 

<b>Network selection</b>	☞ Network selection, Page 18.
<b>Preferences</b>	Select preferences for certain network operators.

☞ **Note:** Changes in the **Network settings** could result in high costs.

# Security Settings


 

---



## Network selection

Navigate in the **Network selection** menu using the  keys and press  (left) to select any of the following menu options:

- New search** Search for available networks.
- Select network** Select network manually.
- Selection mode** Select whether a network will be defined automatically or manually.



## Security Settings

Navigate in the **Security settings** menu using the  keys and press  (left) to select from the following options:


 

- SIM security**  SIM security, Page 18.
- Phone security**  Phone security, Page 18.
- Auto keypad lock** Define whether the key lock should be activated automatically.



## SIM security

Navigate in the **SIM security** menu using the  keys and press  (left) to select from the following options:

-  **Note:** The PIN (Personal Identity Number) and PIN 2 codes are 4 to 8-digit numbers. The PIN and PIN 2 codes are given to you, together with the SIM card, by your mobile network provider.
- PIN lock** Enable/Disable PIN query when switching the phone on.
-  **Note:** If you deactivate the SIM lock, you need not enter the PIN after switching the mobile phone on. It is recommended to leave the SIM lock on to prevent unauthorised persons from using the mobile phone.
- Change PIN** Change the PIN. Follow the instructions displayed.
- Change PIN2** Change PIN 2. Follow the instructions displayed.

## Phone security

Navigate in the **Phone security** menu using the  keys and press  (left) to select from the following options:

-  **Note:** If the phone lock is enabled, you will need to enter the phone lock password every time you turn on the phone.
- Phone lock** Enable/Disable the phone lock.
- Change password** Change the phone lock password. Follow the instructions displayed.
-  **Note:** The phone lock password is set to 1234 at the factory.

## Restoring the Default Factory Settings

**Note:** If you restore the factory (default) settings, all the data saved is lost! You must use the phone lock password (see Page 18) to restore the default settings.

Proceed as follows to restore the factory settings:

1. When in Standby mode, press:

(left) Settings Restore factory settings

2. Enter the phone lock password and press (left) to confirm it.

3. Press (left) again to answer the prompt.

The phone restarts and the factory settings are restored.

## SOS (Emergency Call) Function

The SOS key activates the emergency call function. Press and hold the SOS key for approx. 3 sec. to trigger an emergency call. An acoustic alarm signal is sounded and the emergency text is sent to the phone numbers stored for the purpose. After that, the respective phone numbers stored are dialled in succession in Handsfree mode. You can assign up to 5 phone numbers to the SOS key.

Proceed as follows to assign phone numbers to the SOS key :

Settings (left) Select the menu.

Emergency Settings

(left) Select the menu option.

Number List (left) Select the menu option.

or (left) Enter the phone number and continue or confirm.

## Female/Male contact

Use these menu options to store a number you can later call by pressing & holding the key (female contact) or key (male contact) in Standby mode.

To assign numbers to these keys, open / and proceed as follows:

(left) Enter the phone number to be stored and confirm it.

Set the phone to Standby mode, press the corresponding key for approx. 2 sec. and a connection is established to the number stored.

## User Profiles

Use the menu to change the ring tone settings.

To open the menu, press:

(left) User profiles (left)




Press the keys to select a profile and press (left) to open the following options:

 
 
 
 
 
 
 
 
 
 
 
Activate the profile selected.

Adapt the selected profile to your personal needs  
(see Adapting user profiles, Page 20).

Reset the profile selected to the default factory settings.

 
Adapting user profiles

Navigate in the profile with the / keys and press  (left) to select from the following menu options:

 



	Set whether the phone should ring and vibrate, ring only or vibrate only.
	Set the ringing type.
	Set the ringing tone for incoming calls.
	Set the ringing tone volume.
	Set the tone for an incoming text message.
	Set the volume for the incoming text message tone.
	Set the key tone.
	Set the key tone volume.
	Set the power on tone.
	Set the power off tone.
	Switch the system tones on/off.

 
Organizer

The  menu provides helpful everyday utilities.

 
To open the  menu, press:

 
 (left) /   (left)

 



Navigate in the  menu using the / keys and press  (left) to select from the following menu options:


 
 
 
 
 
 
 
	 Calendar, Page 20.
	 Tasks, Page 21.
	 Alarm, page 21.

Calendar

 can be used to manage and be reminded of important personal dates and appointments (events).


When you open the  menu option, you will see a calendar with the cursor placed on the current date.

Navigate in the  option with the / keys and press  (left) to select the following menu options:

	Display and manage events for the selected day.
	View all events.
	Add an event to a specific day.
	Delete an event.
	Spring directly to the date entered.
	Spring directly to today's date.
 	Change the calendar view.

## Tasks

Navigate in the **Tasks** option using the  $\uparrow/\downarrow$  keys and press  $\leftarrow$  (left) to select from the following options:

<b>View</b>	View the task selected.
<b>Add</b>	 Creating tasks, Page 21.
<b>Edit</b>	Edit the task (change name, date, time, etc.).
<b>Search</b>	Search for a task.
<b>Delete</b>	Delete the task selected.
<b>Delete overdue</b>	Delete overdue tasks.
<b>Delete all</b>	Delete all tasks.
<b>Jump to date</b>	Spring directly to the date entered.
<b>View uncompleted</b>	View outstanding tasks.

## Creating tasks

If you have selected **Add**, use the  $\uparrow/\downarrow$  keys to navigate in the options and define the following settings:

1. Enter the date for the task.
2. Enter the time at which you wish to be reminded of the task.
3. Enter the name for the task.
4. Set the alarm alert for the task.
5. Define whether or not the task should be repeated at regular intervals.
6. Define the priority of the task.
7. Enter the details for the task.
8. Define whether the task has yet to be completed (**Undone**) or has been completed (**Done**).

When all the settings have been defined, press  $\leftarrow$  (left) to save the new task or discard all the settings.

## Alarm

Use the **Alarm** option to set the alarm clock.

Navigate with the  $\uparrow/\downarrow$  keys and press  $\leftarrow$  (left) to select from the following setting options:

1. Define whether the alarm clock is active (**On**) or inactive (**Off**).
2. Enter the time at which the alarm should sound.
3. Define whether or not the alarm should be repeated at regular intervals.
4. Set the alarm tone which should be sounded.
5. Define whether and when the Snooze function should be activated.
6. Set the type of signal.

Multimedia

This mobile phone is equipped with an integrate radio and image viewer.

Radio

The **FM radio** function can be used to receive radio stations and listen to them via the headset (supplied).

Navigate as follows:

<b>[Left](left)</b> <b>[Up]/[Down]</b> <b>Multimedia</b> <b>[Up]/[Down]</b> <b>FM radio</b> <b>[Left](left)</b>	
<b>[Down]</b>	Switch the radio on/off.
<b>1</b> <b>3</b>	Tune the radio station.
<b>*[Star]</b> <b>#</b>	Adjust the volume.
Press <b>[Left](left)</b> to define further settings for <b>Channel list</b> , <b>Manual input</b> or <b>Auto search</b> .	

Image viewer

The image viewer can be used to display, rename, delete or sort photographs.

Navigate as follows in this case:

<b>[Left](left)</b> <b>[Up]/[Down]</b> <b>Multimedia</b> <b>[Up]/[Down]</b> <b>Image viewer</b> <b>[Left](left)</b>
Press <b>[Left](left)</b> to define further settings.

Selecting Pictures

<b>[Left](right)</b>	Open the picture selection menu.
3 sec. <b>1</b> - <b>8</b>	Select a memory location.
<b>[Up]/[Down]</b> <b>Add</b> <b>[Left](left)</b>	Select a menu option.
<b>[Up]/[Down]</b> <b>...</b> <b>[Left](left)</b>	Select the phone book entry.
<b>[Up]/[Down]</b> <b>Edit</b> <b>[Left](left)</b>	Select the picture in the File Manager.
<b>[Left](left)</b>	Save the changes

Dialling via the picture selection menu

<b>[Left](right)</b>	Open the picture selection menu.
<b>1</b> - <b>8</b>	Call the number assigned to the memory location

Torch

An LED is provided at the top of the mobile phone which can be used as a torch.

3 sec. <b>0</b>	Switch the torch on/off.
-----------------	--------------------------

## Troubleshooting

### Problems and solutions

Problems	Solutions
The mobile phone cannot be switched on.	<ul style="list-style-type: none"> <li>- No battery inserted.</li> <li>- Battery is not charged.</li> </ul>
No signal quality is displayed.	<ul style="list-style-type: none"> <li>- No network connection. The mobile phone is in a location where there is no network service. Move to a different location or contact your mobile service provider.</li> </ul>
Keypad does not function or only functions very slowly.	<ul style="list-style-type: none"> <li>- The operating speed of the display is reduced in the case of low temperatures. This is normal. Use the phone in a warmer location.</li> </ul>
A message appears in the display for some functions, indicating execution/use is not possible.	<ul style="list-style-type: none"> <li>- Many functions can only be used after the respective service has been applied for. Therefore, please contact your mobile service provider locally for more details.</li> </ul>
Screen frozen or no response when pressing keys.	<ul style="list-style-type: none"> <li>- Remove the battery for 3 minutes and try again.</li> </ul>
No connection to the mobile telecommunication network.	<ul style="list-style-type: none"> <li>- Contact your mobile service provider.</li> </ul>
The <span style="border: 1px solid black; padding: 0 2px;">Insert SIM</span> message appears in the display.	<ul style="list-style-type: none"> <li>- Ensure that the SIM card has been installed correctly. Contact your mobile service provider, if necessary.</li> </ul>
The battery cannot be charged or is empty within a short time.	<ul style="list-style-type: none"> <li>- Battery is defect.</li> <li>- Place the phone correctly in the charging unit or connect the power adapter properly. Clean the contact surfaces on the mobile phone and power adapter with a soft, dry cloth.</li> <li>- Charge the mobile for 4 hours.</li> </ul>

### Tips on the battery

Only use batteries and power adapters approved by the manufacturer, otherwise the battery could be damaged.

Do not short circuit the battery. Always leave the battery in the phone to avoid accidentally short circuiting the battery contacts.


Keep the battery contacts clean and free of dirt.

The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased noticeably.

To prevent unnecessary power consumption via the power adapter plug, disconnect the power adapter plug from the power socket when the battery is not being charged.

### Technical Properties

Feature	Value
Standard	GSM <sup>1</sup> 900, 1800 MHz dual band
Dimensions (H x W x D)	116.3 x 54 x 14.1 [mm]
Weight	Approx. 87 g incl. battery
Power supply	Input: 100-240 V, 50-60 Hz, 0.15 A Output: 5 V, 500 mA
Battery	3.7 V, 600 mAh Charging time: approx. 4 hours
Standby time	Up to 140 hours
Max. talk time	Up to 270 min.
Display	LCD with back-lighting
Permissible ambient temperature	-10 °C to 40 °C
Permissible relative humidity	30% to 75%
SAR value	0.49 W/kg

 **Note:** Subject to change without notice!

### Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive:

1999/5/EC directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device.



### SAR Information

Information on radio frequency emissions and specific absorption rates (**SAR = Specific Absorption Rate**).

All the applicable safety standards related to radio frequency emissions were implemented during the development of this mobile phone.

The limit values are based on scientific directives and contain a safety margin in order to guarantee the safety of all persons regardless of age and state of health. The values specified in the directive concerning radio frequency emissions are based on a unit called SAR. SAR values are established using standard methods in which the phone is operated in all possible frequency bands with the highest power output. Although the SAR values of various phone models can differ, all the models were developed to maintain the relevant directives on radio frequency emissions.


The following information applies to countries such as the EU member states which accept the SAR limit value of 2 W/Kg (average value from 10 g fabric) recommended by ICNIRP (International Commission on Non-Ionizing Radiation Protection): The highest measured SAR value using 2 g fabric with this mobile phone was 10 W/kg with measurements taken at the ear.

<sup>1</sup> GSM = Global System for Mobile Communications = Standard for mobile phones.



## Safety Information

Please read this section carefully.

 **Caution: Risk of suffocation!**  
Keep packaging materials and protective foils out of reach of children.

### Intended use

This mobile phone is designed for use when connected to a mobile phone network. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

### Area of use

- Do **not** use the phone in prohibited areas.
- Switch the phone off in the vicinity of medical equipment (e.g. in hospitals).
- Do not use the phone in petrol stations or near fuels and chemicals.
- Please contact the relevant airline company with regard to use in aircraft.
- Keep phone calls as short as possible or use the headset supplied in order to reduce exposure to radio waves in the area of the head.
- Do not keep the mobile phone available near your head and switch it off when not in use (e.g. at night) in order to reduce exposure to radio waves.

### General information

- Prevent exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight. The phone is not waterproof; therefore, keep it dry.
- Only use original accessories. Never attempt to connect other products.
- Repairs to this device may only be completed by qualified service personnel.
- All mobile communication equipment is subject to interference which may impair its performance.
- Keep the phone and accessories out of the reach of children.
- The SIM cards can be removed. Caution! Small children can swallow them.
- The ringing tone is issued via the loudspeaker. Take an incoming call first and then hold the phone to your ear. This prevents any possible hearing damage.
- The phone should only be used in vehicles via the corresponding handsfree equipment. Ensure that no safety-related functions are interfered with when operating the phone. It is essential to observe the applicable national laws and regulations.
- Always maintain a distance of at least 15 cm to implanted heart pacemakers to prevent any possible interference. If you have had a pacemaker implanted, do not carry the phone in a breast pocket when switched on. Always hold the phone to the ear furthest away from the pacemaker during calls. Switch the phone off immediately if you notice or suspect any adverse effects.
- Do not rely on the mobile phone as a safeguard for emergencies. For a variety of technical reasons, it is not possible to guarantee a reliable connection under all circumstances.

### Power adapter plug

- ! **Attention:** Only use the power adapter plug supplied because other power supplies could damage the telephone. Ensure access to the power adapter plug is not obstructed by furniture or such.

### Rechargeable batteries

- ! **Attention:** Never throw batteries into a fire. Only use batteries of the same type.

### Bar code label in the phone

The bar code label contains information on the phone, such as the serial number, for example. Do not remove it.

### Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old **electronic and electrical devices** in a separate waste container. The symbol indicates that the device must not be disposed of in normal domestic waste!



#### Risks to health and the environment from batteries!

Never open, damage or swallow batteries or allow them to pollute the environment. They may contain toxic, ecologically hazardous heavy metals. You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.



**Packaging materials** must be disposed of according to local regulations.

### Maintenance / Guarantee

#### Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth.
- Do not use any cleaning agents or solvents.

#### Guarantee

Keep in a safe place!

Dear Customer,

we are pleased that you have chosen this equipment.

In the case of a defect, please return the device together with the receipt and original packing material to the point-of-sale.

## Konformitätserklärung Declaration of Conformity

DoC-Nr.: 2123

Rev: 01

### 1. gemäß der Richtlinie 1999/5/EG (R&TTE)

In accordance to Directive 1999/5/EC (R&TTE Directive)

*OLYMPIA Business Systems Vertriebs GmbH*

**Der Hersteller / Verantwortliche Person erklärt, dass das Produkt:**

The manufacturer / responsible person declares that the product:

**Mobile Phone**

**Model: Olympia VIVA Colour**

**Gerätekategorie** Equipment class

1 ☒

2 ☐

**bei bestimmungsgemäßer Verwendung den grundlegenden Anforderungen des Artikel 3 der R&TTE) entspricht.**

complies with the essential requirements of Article 3 of the R&TTE Directive, when used for its intended purpose.

### angewendete harmonisierte Normen

Harmonised standards applied

**Gesundheit und Sicherheit gemäß Artikel 3 (1) a**

Health and safety requirements pursuant to article 3 (1) a)

EN 60950-1: 2006 + A11: 2009 + A1:2010  
+ A12:2011

EN 50360: 2001, EN 50371:2002

EN 62209-1: 2006; EN 62209-2:2010

### elektromagnetische Verträglichkeit, Artikel 3 (1) b)

electromagnetic compatibility § 3(1)(2), Article 3(1)(b))

EN 301 489-7 V1.3.1: 2005-11

EN 301 489-1 V1.9.2: 2011-09

### effiziente Nutzung des Funkfrequenzspektrums Artikel 3(2)

efficient use of the radio frequency spectrum Article 3(2)

EN 301 511 V9.0.2: 2003-03

### 2. gemäß der Richtlinie 2005/32/EC (Energieeffizienz)

In accordance to Directive 2005/32/EC (Ecodesign)

### Leistungsaufnahme externer Netzteile

electric power consumption of external power supplies

Commission Regulation EC No 278/2009

Olympia Business Systems Vertriebs GmbH

Zum Kraftwerk 1

45527 Hattingen

Phone: 02324 / 6801 - 0

Fax: 02324 / 6801 - 97

E-mail: olympia@olympia-vertrieb.de

Hattingen, 25. 09. 2012

Ort, Datum / Place & date of issue

H. Prygoda

## A

Alarm, 21

## B

Barring calls, 16

Battery charge indicator, 5

## C

Calendar, 20

Call list options, 15

Call lists, 15

Call settings, 15

Charging, 4

Common settings, 14

Creating phone book entries, 8

## D

Declaration of Conformity, 24

Deleting text, 9

Dialling numbers from  
the call list, 11

Dialling numbers from  
the phone book, 12

Display settings, 17

Diverting calls, 16

## E

Ending a call, 11

Energy-save mode, 7

Entering text and numbers, 9

## G

Getting started, 7

Guarantee, 27

## I

Image viewer, 22

Inbox, 13

Inserting the memory card, 4

## K

Key lock, 8

## M

Maintenance , 27

Making a call, 11

Making and taking calls, 11

Methods of entering text, 9

Move the cursor, 9

Multimedia, 22

## N

Navigation, 8

Network, 5

Network selection, 18

Network settings, 17

Notation, 7

## O

Operating elements, 6

Organizer, 20

## P

Phone book, 10

Phone book settings, 10

Phone lock password, 18

Phone security, 18

Phone settings, 17

Problems, 23

Problems and solutions, 23

Profile settings, 14

Punctuation and  
special characters, 9

## R

Radio, 22

Receiver volume, 12

Rejecting a call, 11

Reset phone, 19

Restore factory settings, 19

## S

Safety information, 25

SAR information, 24

Scope of delivery, 3

Security settings, 18

Selecting pictures, 22

Sent messages, 14

Setting the time and date, 17

SIM card, 3

SIM security, 18

SMS setup, 14

Softkeys, 8

SOS function, 19

Speed dialling, 11, 12

Standby mode, 7

Switching off, 5

Switching on, 5

## T

Taking a call, 11

Talk time, 12

Tasks, 21

Text messages, 13

Time and date settings, 17

Tips on the battery, 23

Torch, 22

Troubleshooting, 23

## U

User profiles, 19

## W

Writing an text message, 13



Please note that the copyright for this operating instruction manual lies with Olympia and, therefore, may not be copied or sold. The data and information in the operating instruction manual is only intended for personal use.



All rights reserved.